



APPLICATION NOTE 214

Using a UART to Implement a 1-Wire Bus Master

Abstract: This application note explains how to use a microprocessor's UART to implement a 1-Wire® bus master. It includes an explanation of the required electrical interface, UART configuration, and timing relationship between UART and 1-Wire signals. The flexibility offered in setting up UART byte timing allows straightforward implementation of 1-Wire time slots as well as the reset and presence detect pulses. With the inclusion of deep transmit and receive FIFOs, several byte values can be transferred on the 1-Wire bus with just a few clock cycles per bit required from the main processor.

Introduction

1-Wire devices provide economical solutions for identification, memory, time keeping, measurement and control. The 1-Wire data interface is reduced to the absolute minimum, i.e., a single data line plus a ground reference. As most 1-Wire devices provide relatively small amounts of data, the typical data rate of 16kbps is more than sufficient for the intended tasks. It is often convenient to use a generalpurpose input/output (GPIO) pin of an 8-bit or 16-bit microcontroller in a "bit banging" manner to act as the bus master.

However, in 32-bit systems, processor clock frequencies routinely exceed 100MHz and using a GPIO pin as the 1-Wire bus master consumes an enormous number of clock cycles per 1-Wire bit. In 32-bit portable systems, precious battery power is consumed while timing the 1-Wire read- and write-time slots. A few systems off load the burden of bit timing and byte framing operations from the main processor by including the DS1WM Synthesizable 1-Wire Bus Master* hardware block in their chipset. If the DS1WM or other hardware 1-Wire master port is not available, communication with 1-Wire devices can be accomplished easily if a Universal Asynchronous Receiver Transmitter (UART) channel is available.

This application note includes an explanation of the required electrical interface, UART configuration, and timing relationship between UART and 1-Wire signals. A general understanding of 1-Wire communications is assumed. Typical timing and logic levels are used in the following discussion and the reader should refer to particular 1-Wire device data sheets for specific timing and voltage specifications and tolerances.

Conceptual Overview

Properly configured with respect to baud rate, data bits per character, parity and number of stop bits, a 115,200 bit per second capable UART provides the input and output timing necessary to implement a 1-Wire master. The UART produces the 1-Wire reset pulse, as well as read- and write-time slots. The microprocessor simply puts one-byte character codes into the UART transmit register to send a 1-Wire 1 or 0 bit and the UART does the work. Conversely, the microprocessor reads single-byte character codes corresponding to a 1 or 0 bit read from a 1-Wire slave. All 1-Wire bit transfers require the bus master, the UART, to begin the cycle by driving the 1-Wire bus low. Therefore, each 1-Wire bit cycle includes a byte transmit and byte receive by the UART. When reading, the received data is of interest, when writing, however, the receive byte is discarded. Depending on the UART's read and write first-in, first-out (FIFO) buffer depth, the UART can also frame 1-Wire bits into byte values further reducing the processor overhead.

UART to 1-Wire Electrical Interface

1-Wire devices operate in an open-drain environment on bus voltages ranging from 2.0V to 5.5V. Exact logic

levels and minimum pullup voltages are device dependent, though generally parasite-power devices require minimum pullup voltage of 2.8V to recharge an internal storage capacitor used to supply power during periods when the data line is low. A 4.7kΩ resistor typically serves as the pullup on the 1-Wire data line. The resistor provides logic-high signals passively, with the bus master and all slave devices driving the logic-low signals. Devices usually include a weak internal pulldown, shown as I_{PD} in **Figure 1**.

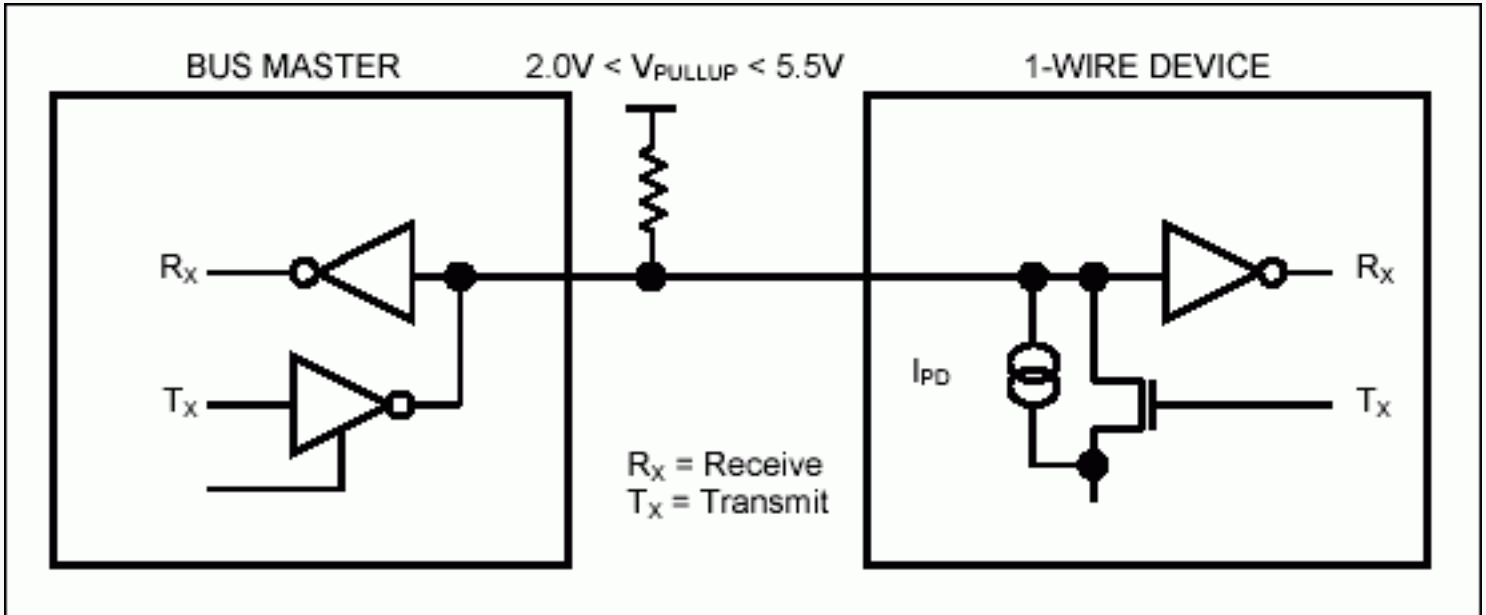


Figure 1. 1-Wire bus interface circuitry.

Since most UART transmit data (TXD) pins are not open drain, an external open-drain buffer circuit is usually needed. This circuit can be constructed out of discrete components as shown in **Figure 2a**, or integrated solutions such as the Fairchild NC7WZ07 shown in **Figure 2b** are available. In both circuits, the 4.7kΩ pullup resistor provides the logic high on the 1-Wire bus.

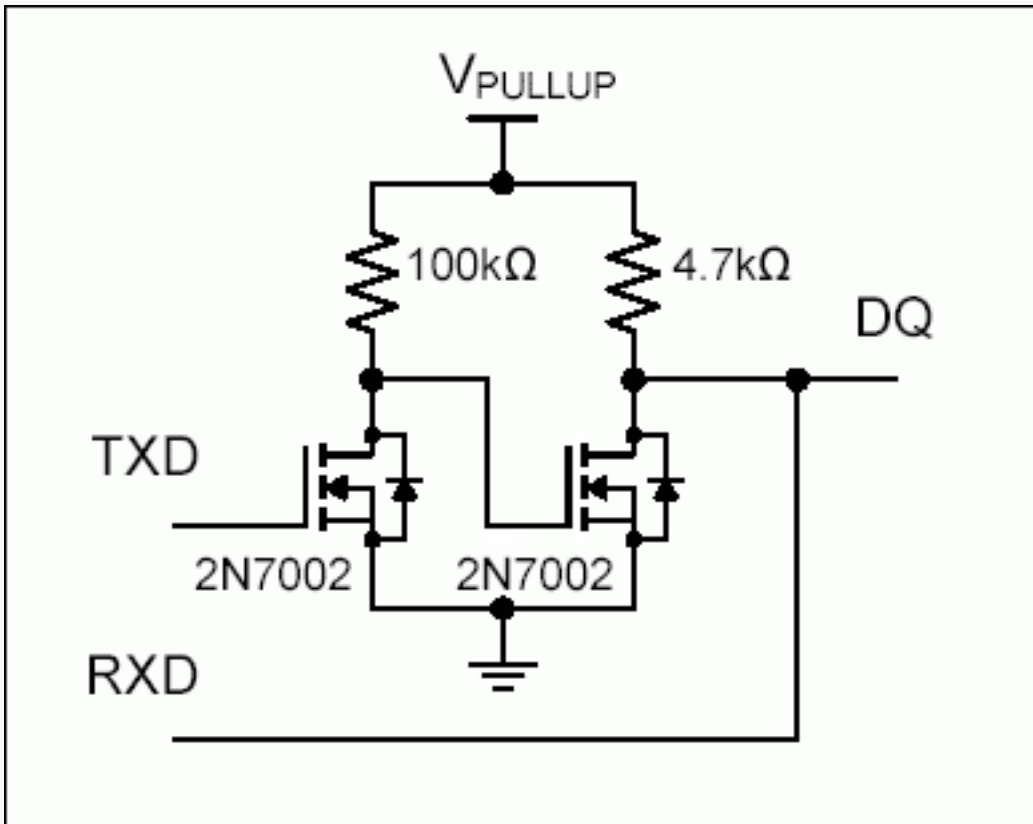


Figure 2a. Discrete open-drain buffer.

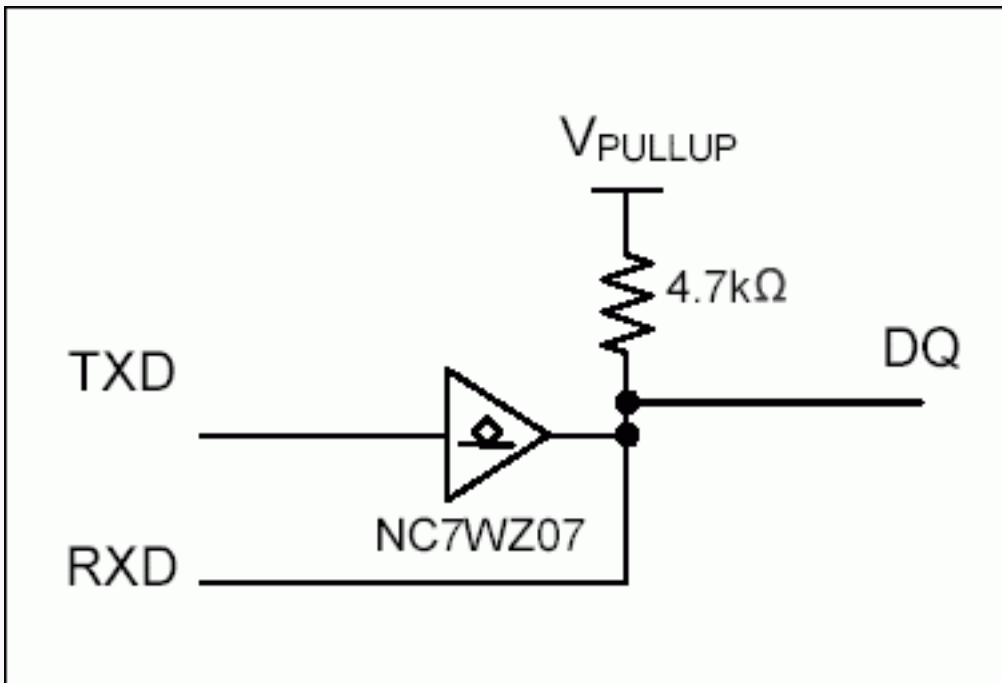


Figure 2b. Integrated open-drain buffer.

1-Wire/UART Bit Timing

The timing diagrams in **Figures 4** through **8** describe the relationship between 1-Wire time slots and UART byte frames. The reader is reminded that the UART serves as the bus master, and therefore begins all bit transfers on a high to low transition of the TXD output. Since the electrical interface ties the buffered TXD signal to receive data (RXD) input pin, the UART receives a byte for every byte transmitted. The operation is similar to loop-back testing.

Each diagram includes a UART configuration, transmit byte value and expected receive byte value. The listed UART configurations produce waveforms compliant with regular mode 1-Wire timings. Note that the UART is configured with a different baud rate for the reset and presence detect than with the read- and write-time slots. It is possible to use other configurations as well, although the evaluation criteria can be different from those shown in the timing diagrams. The transmit byte value corresponds to the 1-Wire bus master role, and the receive byte value or range represents the expected activity on the bus. When reading, the receive value needs to be evaluated to determine the bit value returned by the 1-Wire slave device. The read 0 and read 1 evaluation criteria are included in the diagrams. The *Timing Diagram Legend* applies to the timing diagrams in Figures 4 through 8, and explains the graphical nomenclature of illustrated 1-Wire bus activity.

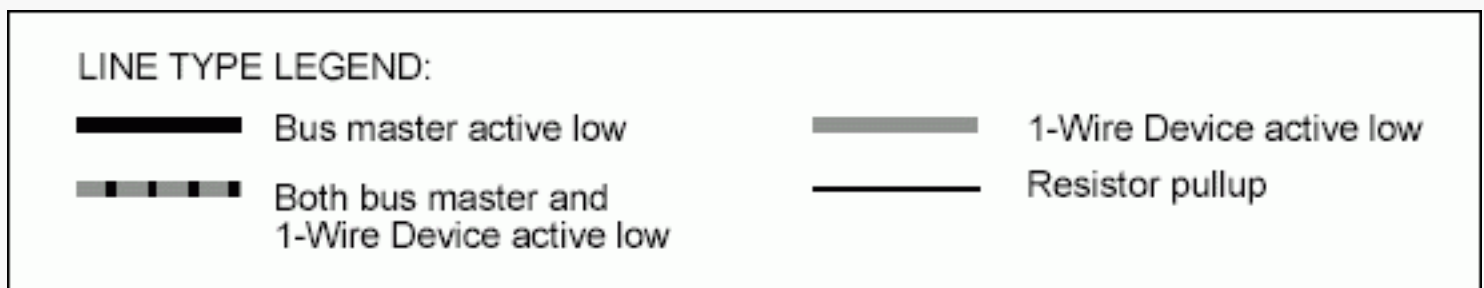


Figure 3. Timing diagram legend.

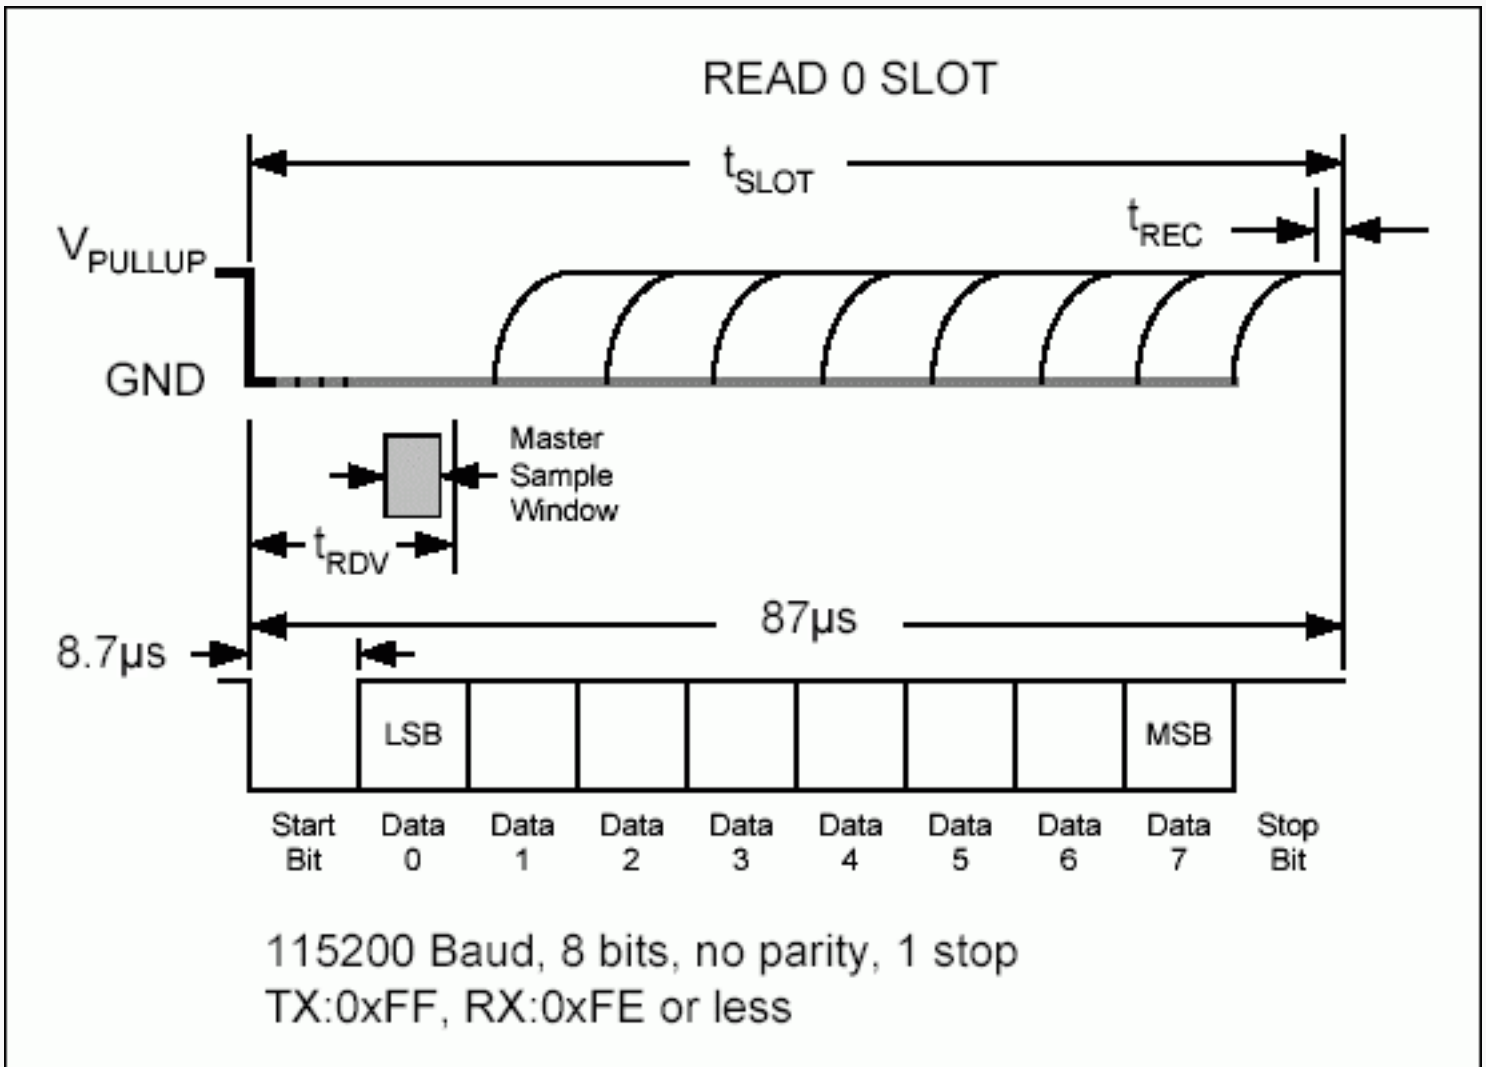


Figure 5. Read 0 time slot.

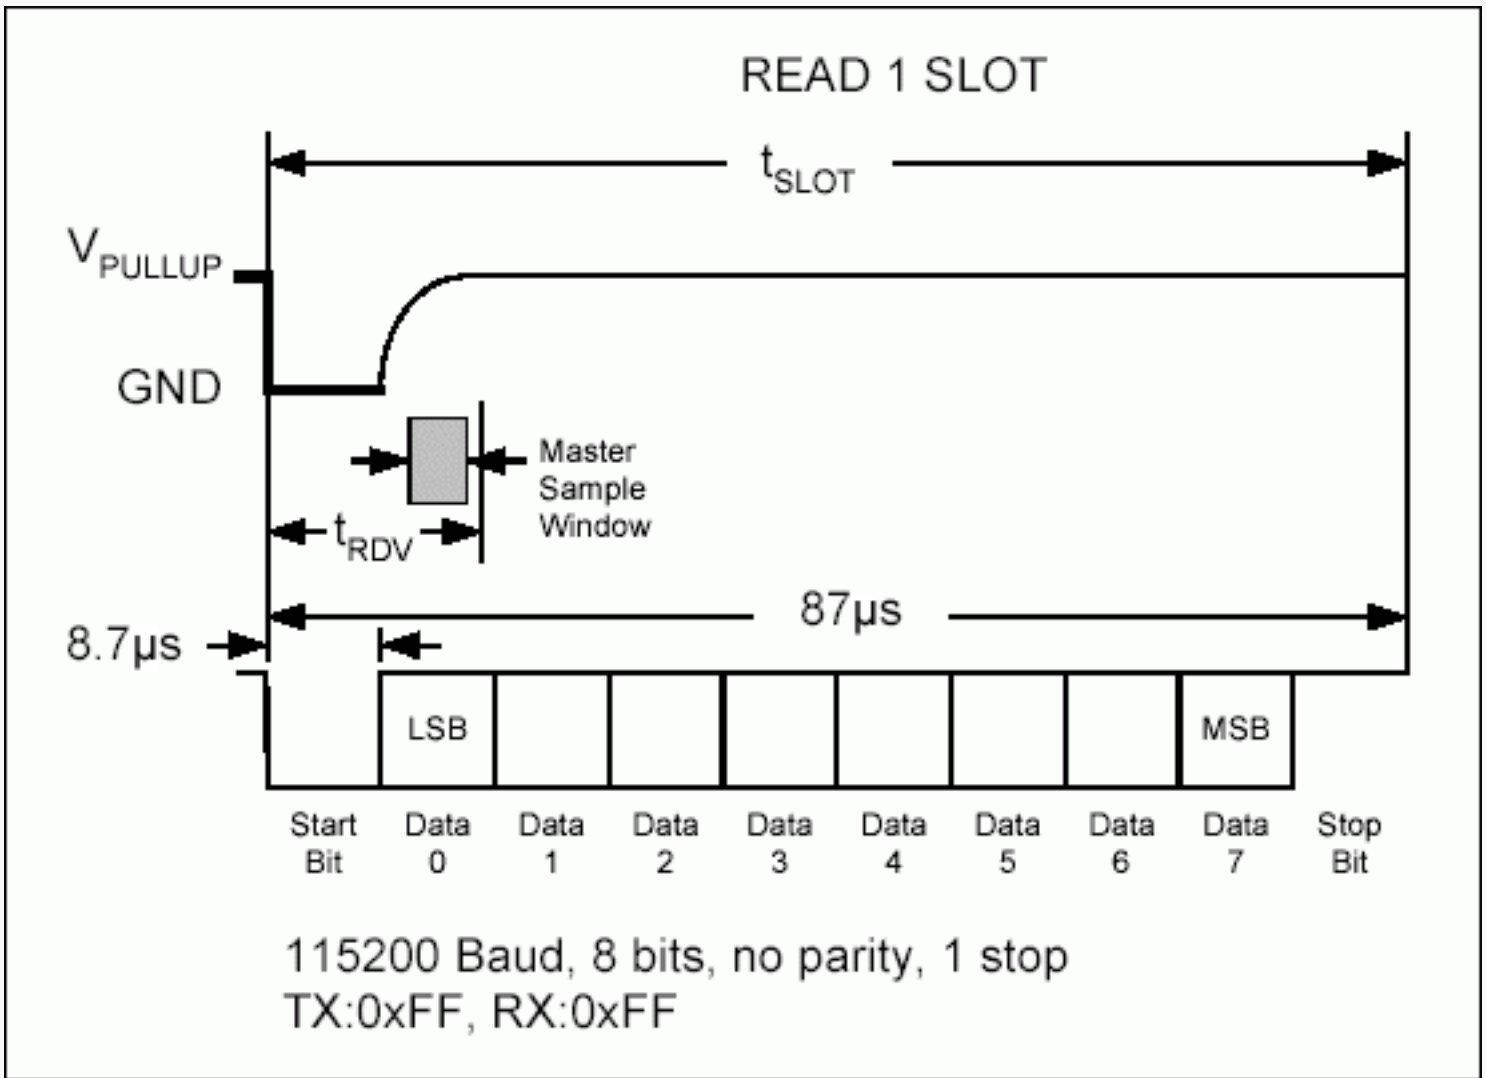


Figure 6. Read 1 time slot.

Read and Write Time Slots generated in Figures 5-8 use a baud rate of 115,200. The receive value from a read 0 will range from 0xFE to 0x00 depending on the internal timebase of the 1-Wire slave device. In order to transmit a 1-Wire 0 bit value, the 1-Wire slave must hold the data line low for t_{RDV} which extends through the LSB bit period for the given UART configuration. The receive value from a read 1 will always be 0xFF, since the 1-Wire slave allows the data line to return to a 1 state as soon as the bus master releases it. Once the receive byte is retrieved from the UART, the LSB should be tested to determine if the slave returned a read 0 or a read 1.

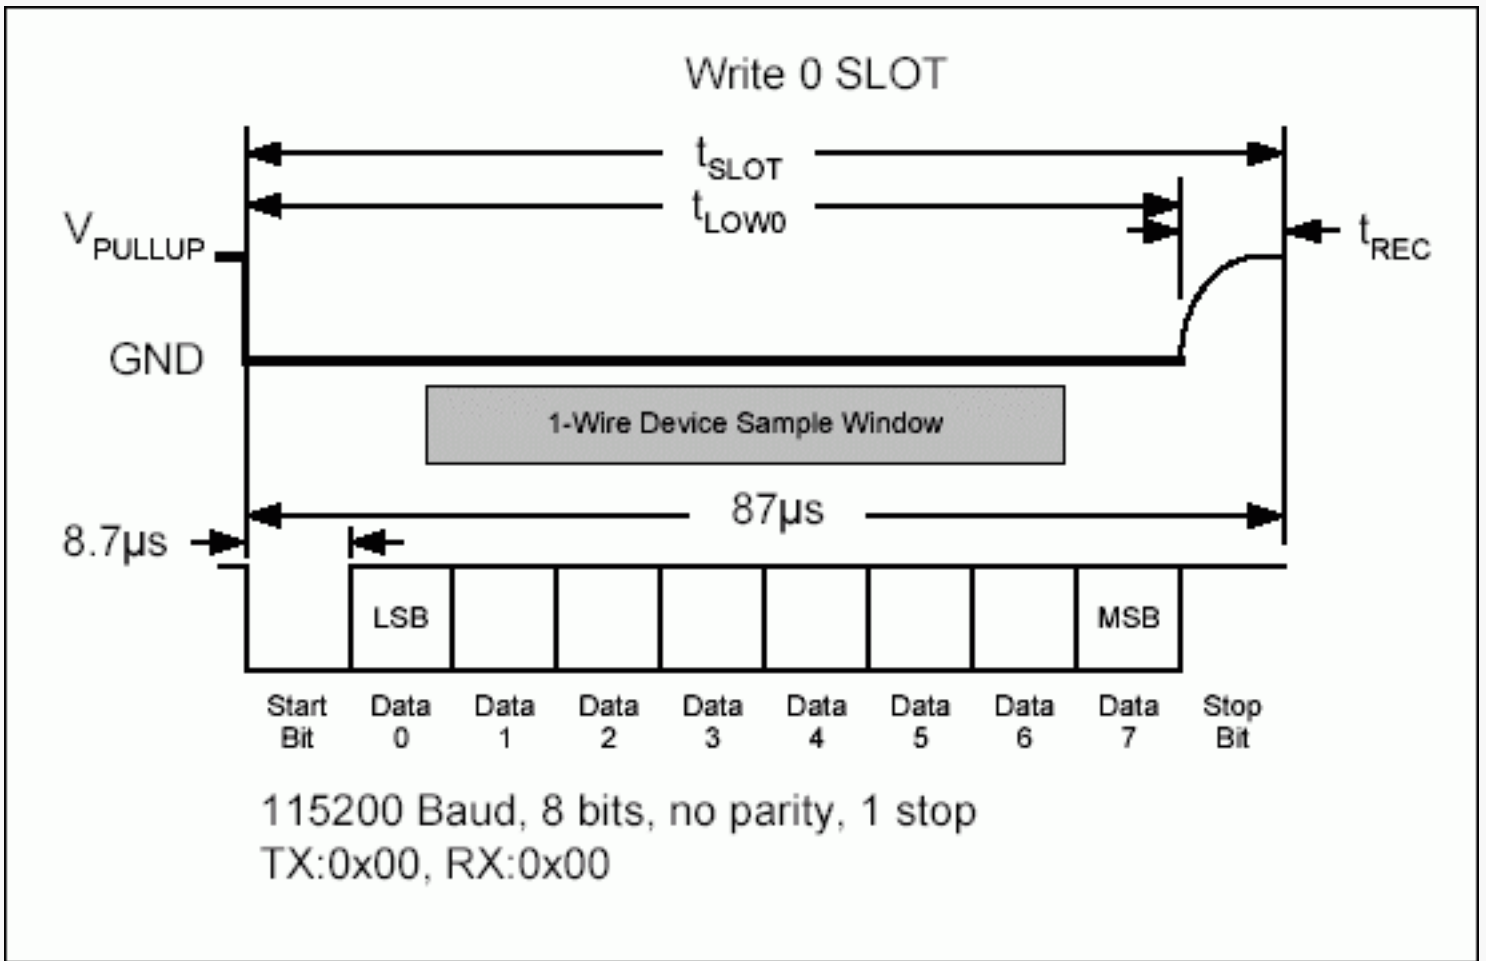


Figure 7. Write 0 time slot.

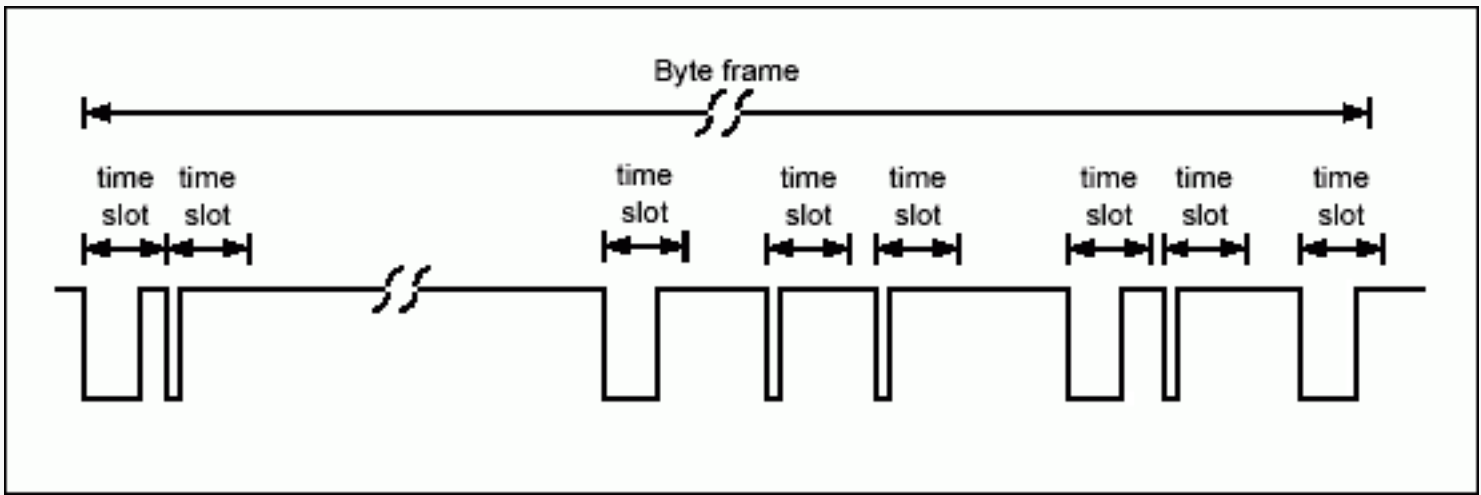


Figure 9. Bit-to-Bit timing flexibility.

Leveraging UART FIFO Depth

Processors with deep FIFOs on the transmit and receive channels can further decrease processor overhead by queuing several bits at a time. The following table shows the FIFO depth for several popular 32-bit microprocessors, and the number of 1-Wire bits that can be sent or received at a time.

Processor	Transmit FIFO	Receive FIFO	1-Wire bits
Intel StrongArm SA-1110	8	12	8
Intel X-Scale™ PXA210/250	64	64	64
Motorola DragonBall™ MC68SZ328	32	32	32
Motorola DragonBall™ MC923MX1	32	32	32

On the Intel PXA250, the entire 64-bit ROM ID or 8 byte wide registers can be read in by clearing the receive FIFO, filling the transmit FIFO with 0xFF with the FIFO mode enabled. The receive FIFO fills with the data returned by the 1-Wire slave device. Using DMA channels can increase the autonomous operation of reading or writing blocks of data larger than the FIFO depth.

Conclusion

The venerable UART remains a valuable peripheral on modern processors because of its programmability. The flexibility offered in setting up UART byte timing allows straightforward implementation of 1-Wire time slots as well as the reset and presence detect pulses. With the inclusion of deep transmit and receive FIFOs, several byte values can be transferred on the 1-Wire bus with just a few clock cycles per bit required from the main processor. Additional information on 1-Wire communications is available from the Maxim/Dallas Semiconductor website at <http://www.maxim-ic.com>.

1-Wire is a registered trademark of Maxim Integrated Products, Inc.
 DragonBall is a trademark of Motorola, Inc.
 Intel XScale is a registered trademark of Intel Corporation.

Application note 214: www.maxim-ic.com/an214

More Information

For technical support: www.maxim-ic.com/support

For samples: www.maxim-ic.com/samples

Other questions and comments: www.maxim-ic.com/contact

Automatic Updates

Would you like to be automatically notified when new application notes are published in your areas of interest?
[Sign up for EE-Mail™](#).

Related Parts

DS1990A: [QuickView](#) -- [Full \(PDF\) Data Sheet](#) -- [Free Samples](#)

DS1WM: [QuickView](#) -- [Full \(PDF\) Data Sheet](#)

DS2401: [QuickView](#) -- [Full \(PDF\) Data Sheet](#) -- [Free Samples](#)

DS2438: [QuickView](#) -- [Full \(PDF\) Data Sheet](#) -- [Free Samples](#)

DS2740: [QuickView](#) -- [Full \(PDF\) Data Sheet](#) -- [Free Samples](#)

DS2751: [QuickView](#)

DS2760: [QuickView](#) -- [Full \(PDF\) Data Sheet](#)

DS2761: [QuickView](#) -- [Full \(PDF\) Data Sheet](#)

DS2762: [QuickView](#) -- [Full \(PDF\) Data Sheet](#) -- [Free Samples](#)

DS9097E: [QuickView](#) -- [Full \(PDF\) Data Sheet](#)

AN214, AN 214, APP214, Appnote214, Appnote 214

Copyright © by Maxim Integrated Products

Additional legal notices: www.maxim-ic.com/legal